

WINTER WEATHER DRIVING

WINTERIZE YOUR VEHICLE

BE SURE YOUR VEHICLE IS READY
FOR THE RIGORS OF WINTER

CHECK THE CONDITION OF YOUR WINDSHIELD WIPER BLADES

Most blades are recommended for replacement at one year or less.

CLEAR ALL WINDOWS, HEADLAMPS, TAIL LAMPS AND SIGNAL LAMPS OF FROST, ICE AND SNOW

See and be seen in winter weather.

USE A WINTER WINDSHIELD WASHER FLUID

It should be rated not to freeze at 0°F (if you are traveling in an area subject to freezing). In areas of extreme cold use washer fluid with a freeze point of -25°F to -35°F.

CHECK VEHICLES EXTERIOR LIGHTS/LAMPS

Visibility is generally reduced during winter weather and there are fewer daylight hours. Make sure they are working.



CHECK ALL VITAL FLUIDS

Engine oil, transmission fluid, coolant/antifreeze, and brake fluid need to be within their normal operating range.

CHECK TIRE INFLATION

As temperatures fall, tire air pressure can drop by as much as 1 psi (pounds per square inch) for every 10 degrees the temperature falls.